

WIRELESS HEADPHONES

INSTRUCTION MANUAL

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

WARNINGS

- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.
- Protect the device from any risk of dripping or splashing.
- Never place any naked flame near the machine.
- Use caution if you use the headphones while driving or exercising an activity that requires attention. Observe local regulations on the use of a mobile phone and headphones.
- Do not wear your headphones during any water sports (swimming, water skiing, surfing, etc.).

DESCRIPTION OF THE DEVICE

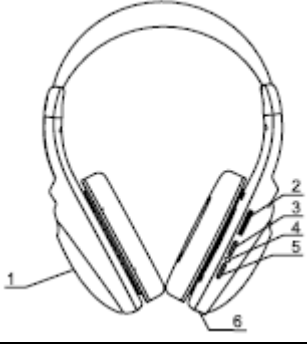 
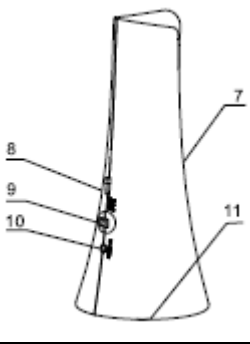 


RECEIVER	TRANSMITTER	ACCESSORIES
		 <p>12. Stereo cable jack male/2 female RCA</p>
<p>1. Battery compartment (Receiver) 2. On / off switch and volume control (ON / OFF) 3. Automatic tuning (SCAN) 4. Power Indicator 5. Reset button (RESET) 6. Audio Input</p>	<p>7. Power Indicator 8. ON / OFF switch (ON / OFF) 9. AC power socket (4.5 V, DC, not supplied AC adapter) 10. Microphone jack (AUDIO IN) 11. Battery compartment (transmitter)</p>	 <p>13. Stereo cable jack male/2 RCA plugs</p>

Figure 1

INSTRUCTIONS

Batterij installment

Place 2 batteries (AAA) in both the receiver battery and the transmitter, making sure to respect the + and -.

Usage


Usage / Functions	Listening to the Radio
Connecting cable	No wired connection required
Select the function of the transmitter	Position "OFF"
Necessary equipment	The receiver only
Procedures 	<ul style="list-style-type: none"> - Press the SCAN button repeatedly to search for your desired radio station. - Repeat the procedure until you get a good sound. - Press the RESET button to reset the search.

Figure 2


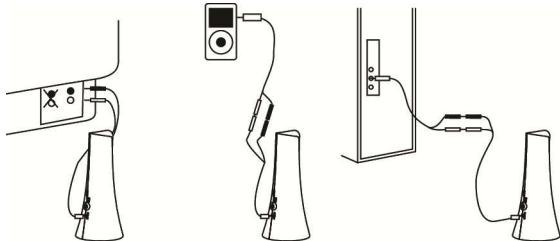 
Usage / Functions	Wireless Earpiece
Connecting cable 	<ul style="list-style-type: none"> - Connect the audio cable (13) between the audio source and the transmitter directly if appropriate. - Connect the audio cable (13) with the audio cable (12) (red RCA connector to red, white RCA connector to white) beforehand if necessary. 
Select the function of the transmitter	Position "ON"
Necessary equipment	The receiver and transmitter
Procedures	<ul style="list-style-type: none"> - Press the RESET button to perform a reset if you were previously on another function of your device. - Press the SCAN button to search for the sound.

Figure 3

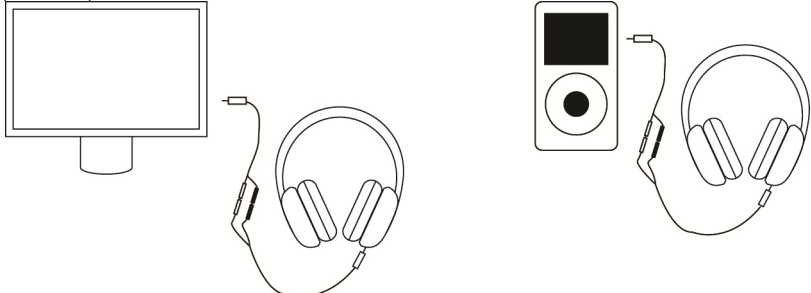 
Functions	Wired Headset
Usage	
Connecting cable	<p>- Connect the audio cable (13) with the audio cable (12) (red RCA connector to red, white RCA connector to white)</p> <p>- Then plug one side into your audio source and the other into the receiver (headset)</p> 
Select the function of the transmitter	Position "OFF"
Necessary equipment	The receiver only
Procedures	The connection between your audio source and the receiver is established automatically. Reset the function by pressing the RESET button if necessary.

Figure 4

REMARKS

- ✚ For best reception, extend the audio cable (it functions as an antenna at the same time).
- ✚ You can improve sound quality by adjusting the volume from the audio source (TV, DVD player, PC ...), for example in case of sound distortion or excessive noise.
- ✚ Replace the batteries if you are experiencing the following issues :
 - The brightness of the signal strength indicator is low.
 - The reception is getting poor.
 - The volume decreases or the sound deteriorates.

TECHNICAL CHARACTERISTICS

TRANSMITTER

- Frequency: FM
- Range: 50m (without interference)
- Requires 2 AAA batteries (not included), 3V⁻⁻⁻

RECEIVER

- Frequency Range: 87.5 MHz to 108 MHz
- Frequency: FM
- Distortion factor: ≤ 2%
- Requires 2 AAA batteries (not included), 3V⁻⁻⁻

WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France
Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD, Germany
Made in PRC

