

KURZANLEITUNG



MAGNETISCHES „CLICK & CHARGE“
USB-KABEL ZUM LADEN DEINES
COUPLE'S CUSHION.



VOR DEM ERSTEN GEBRAUCH BITTE
VOLLSTÄNDIG AUFLADEN.
WÄHREND DES LADEVORGANGS
LEUCHTET DIE LED AN DER
FERNBEDIENUNG DAUERHAFT. IST
ES VOLLSTÄNDIG GELADEN, BLINKT
DIE LED. LADEZEIT: ~ 180 MINUTEN.



BITTE REINIGE DEIN COUPLE'S
CUSHION VOR UND NACH JEDEM
GEBRAUCH GRÜNDLICH.



3 SEC.

ZUM EIN-/AUSSCHALTEN EINE DER
PFEILTASTEN FÜR 3 SEKUNDEN
GEDRÜCKT HALTEN.



+

-

PFEILTASTEN FÜR EINFACHEN
WECHSEL DER 10 VIBRATIONSMODI.
LAUFZEIT: BIS ZU ~ 180 MINUTEN.

SHORT INSTRUCTION GUIDE



MAGNETIC 'CLICK & CHARGE'
USB CABLE TO RECHARGE YOUR
COUPLE'S CUSHION.



WE RECOMMEND FULLY CHARGING
THE PRODUCT BEFORE FIRST USE.
THE LED LIGHT ON THE REMOTE
CONTROL WILL LIGHT UP
CONTINUOUSLY WHILE CHARGING
AND FLASH WHEN THE PRODUCT IS
FULLY CHARGED.



CHARGING TIME: ~ 180 MINS.



PLEASE CLEAN YOUR COUPLE'S
CUSHION THOROUGHLY BEFORE
AND AFTER EACH USE.



FOR ON/OFF PRESS AND HOLD ONE
OF THE ARROW BUTTONS FOR 3
SECONDS.



ARROW BUTTONS TO MOVE UP AND
DOWN THE 10 VIBRATION MODES.
BATTERY RUN TIME: UP TO ~ 180 MINS.