

Dear **DIGIPHOT**<sup>®</sup> customer,

Congratulations for purchasing this high-quality DIGIPHOT magnifier set. To get the best possible use out of this product, please follow the instructions below.

First check if the contents of the package are complete.

This set contains:

One handle with LED lighting

One magnifier with a 2,5x magnification (Ø 90mm)

One magnifier with a 6x magnification (Ø 75mm)

One magnifier with a 16x magnification (Ø 37mm)

One protective case for travelling and safekeeping



Please only use alkaline batteries of the same type or corresponding rechargeable batteries. Never combine used and new batteries or batteries of varying types. For longer periods of nonuse please remove the batteries and store them separately.

First open the battery case and put in the batteries (3x AAA). Watch out for the correct polarity.



After that reassemble the handle again.



Turning on the LED lights:

Push the switch in the direction of the magnifier.

To switch them off pull the switch back towards the handle again.



To switch lenses you have to press the two buttons on the right and left side of the handle and pull the magnifier out of the handle.

Push the magnifier you want to use into the handle until the two buttons click and snap into place again.



We hope you have a great time with your magnifier set.

DIGIPHOT gives a warranty of two years on this product.

If despite our thorough quality control you have any reason for complaints send the complete set together with your purchase voucher to:

DIGIPHOT


Geiselhof 7

D 92272 Freudenberg

E-Mail: [info@digiphot.org](mailto:info@digiphot.org)

Tel: +49 (0) 96 27 - 9 12 18

Fax: +49 (0) 96 27 - 9 12 19

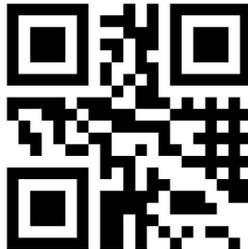

Visit our website: [www.digiphot.eu](http://www.digiphot.eu)